 




# Acer Iconia B1-710 Camera Replacement

How to replace the camera on your Acer Iconia B1-710

Written By: Ryan Weber

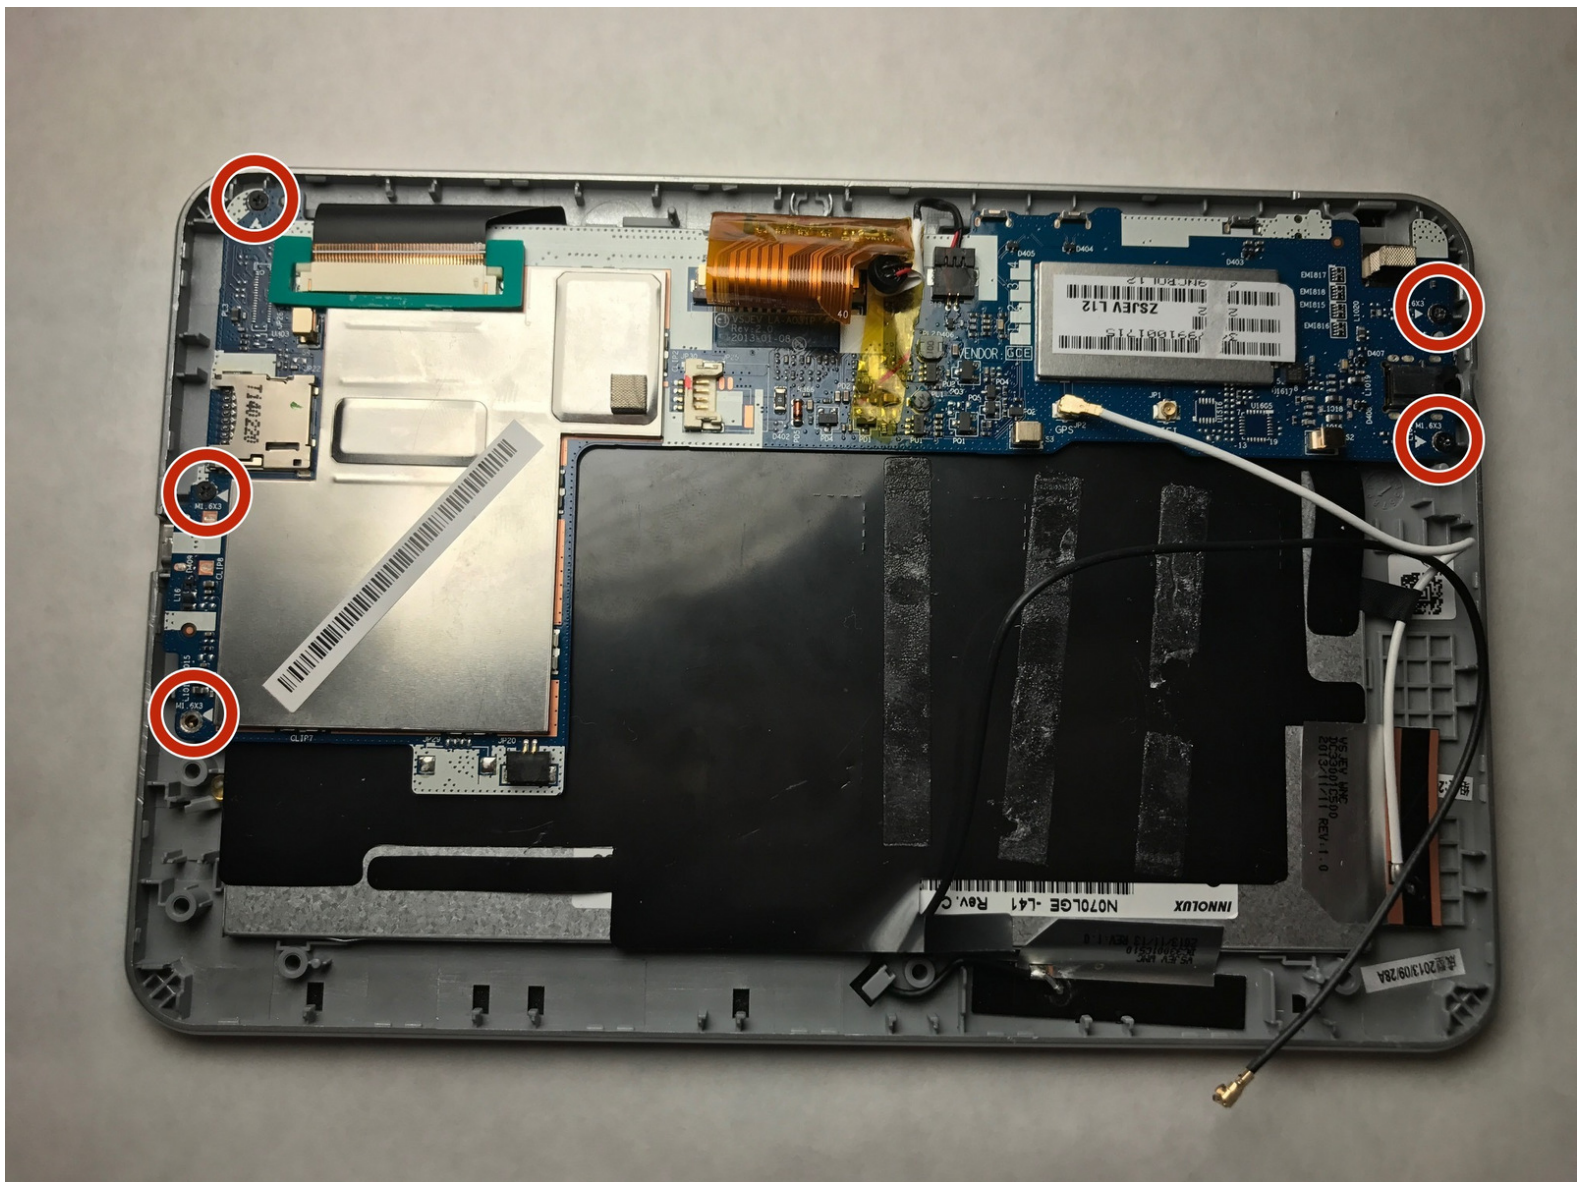

## INTRODUCTION

How to remove and replace the camera on your Acer Iconia B1-710 tablet


---



### TOOLS:

- [Phillips #000 Screwdriver](#) (1)
  - [Metal Spudger](#) (1)
-


## Step 1 — Battery

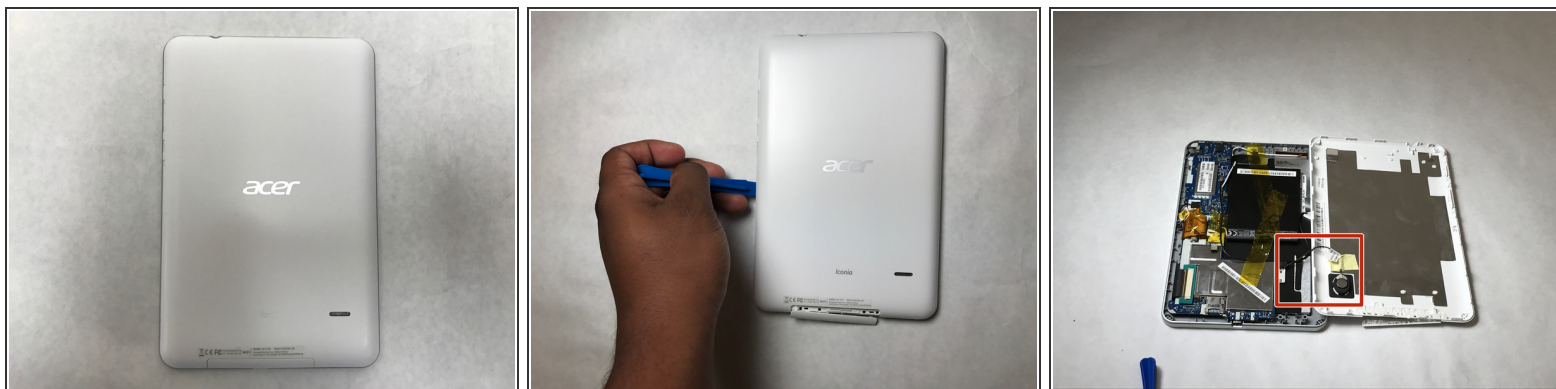

- Open back cover by prying casing off.

⚠ Careful to not pull pieces apart aggressively. There is a wire that could break

## Step 2

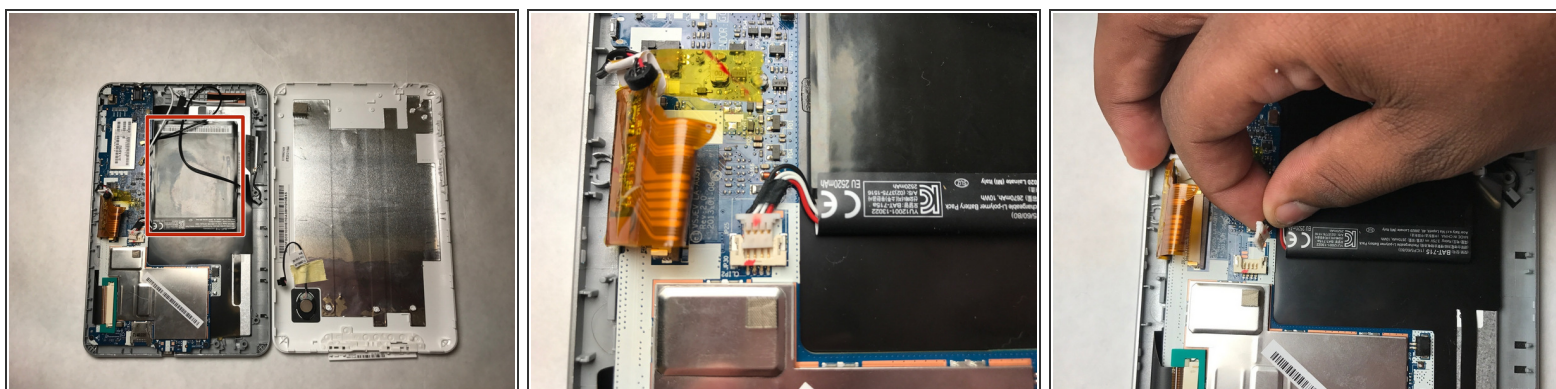

- Locate the battery
- Unplug the battery from the motherboard





## Step 3



  - Take the battery out

**i** The battery is lightly glued in so there may be some difficulty



## Step 4 — Camera

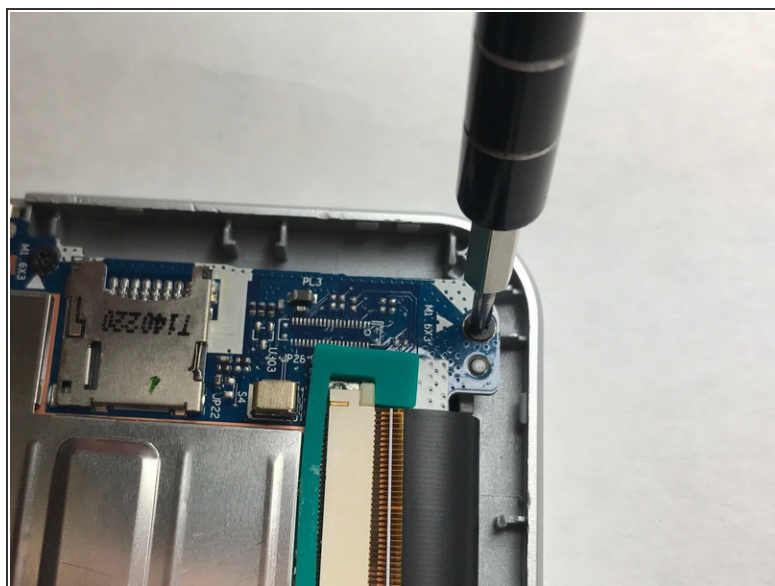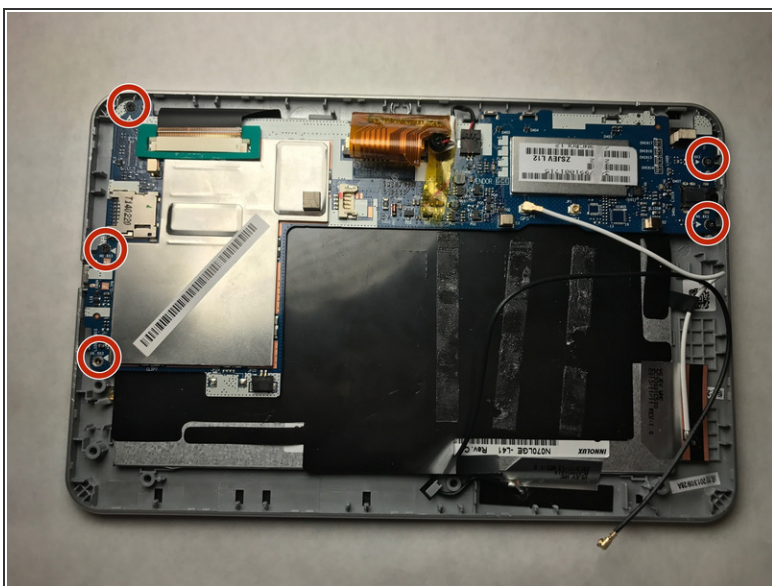

- Unscrew the 5 3mm #000 Phillips head screws



**i** Keep the screws in a safe place after taking them out

## Step 5

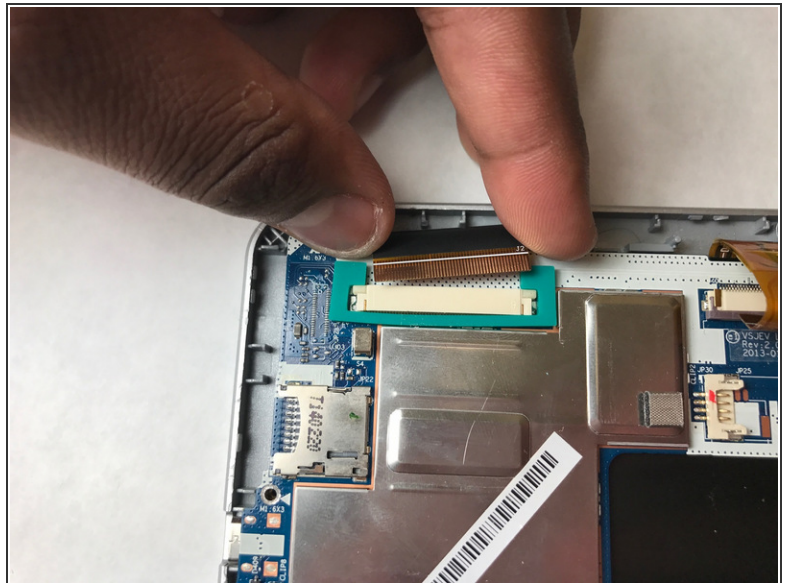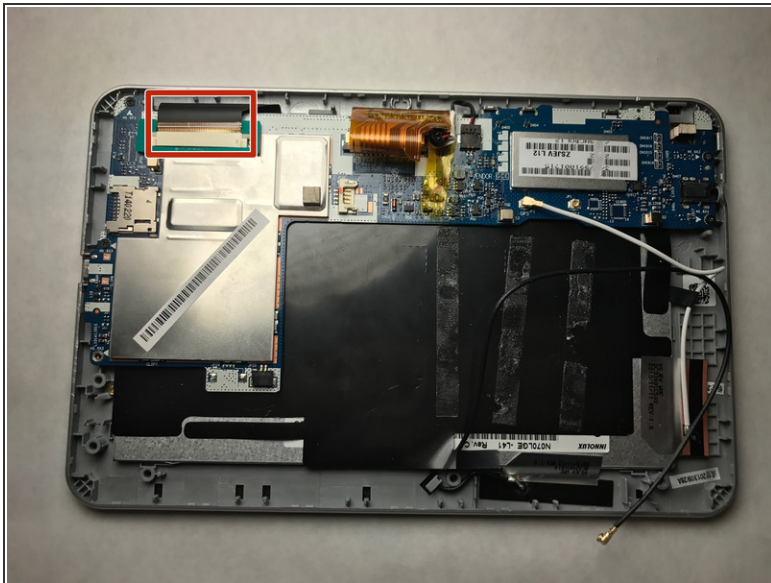  

- Unplug the LCD

## Step 6


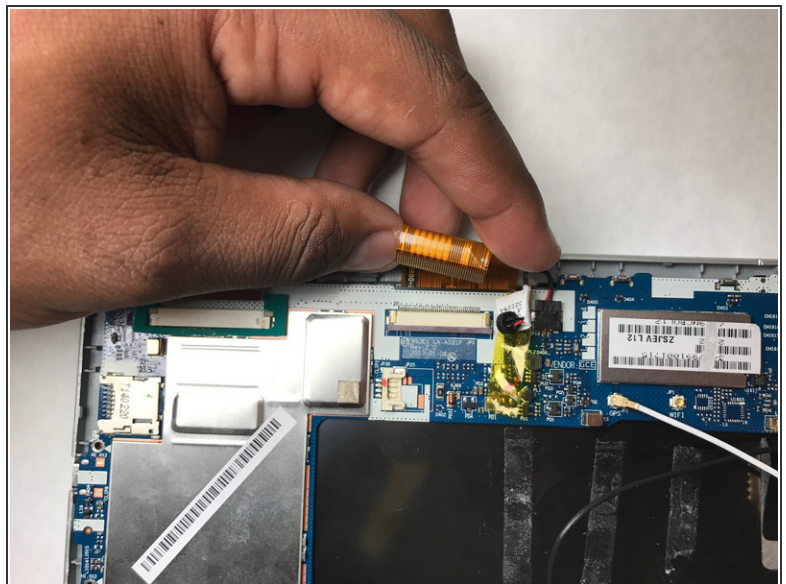 
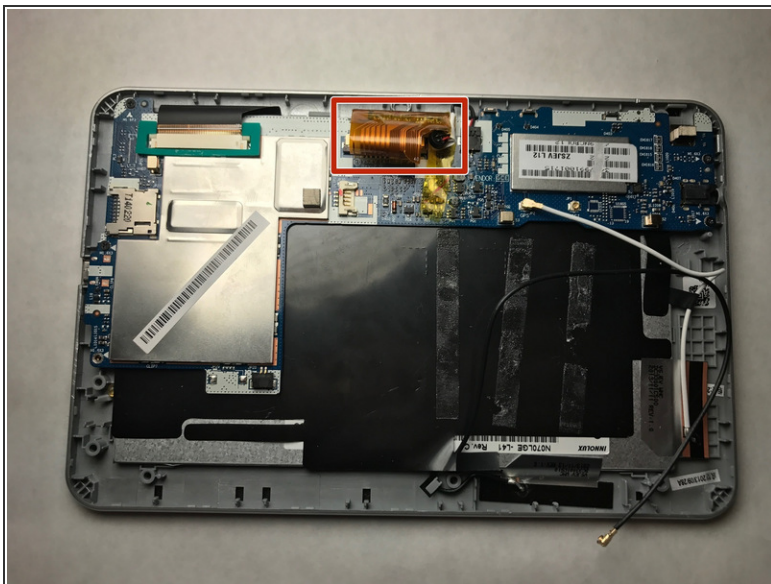 


- Unplug the orange strip

⚠ This piece can tear easily




## Step 7

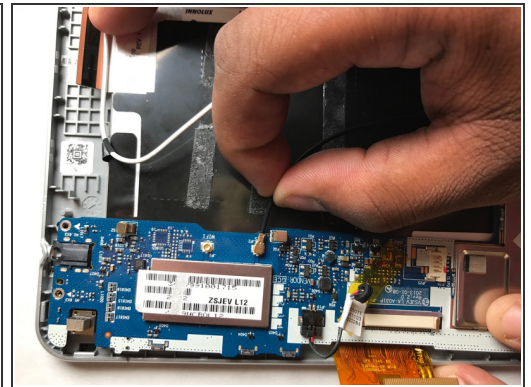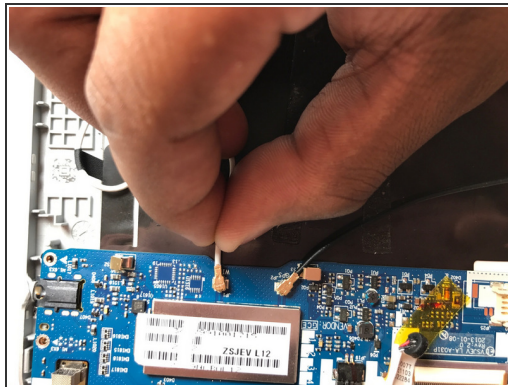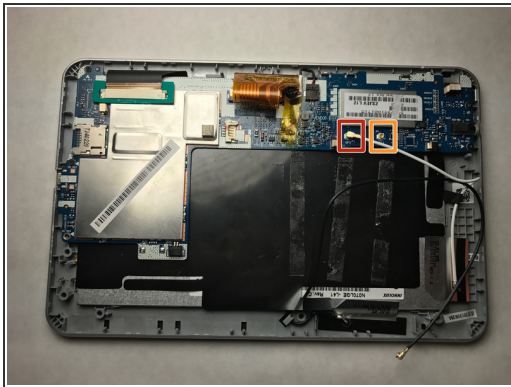   




- Unplug the white wire
- Unplug the black wire

## Step 8

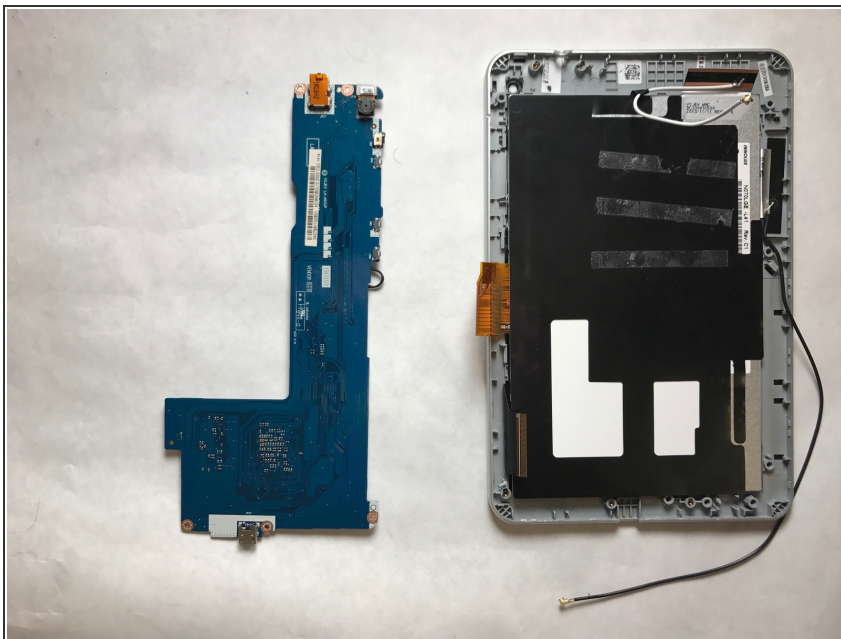 

- Remove the motherboard

## Step 9

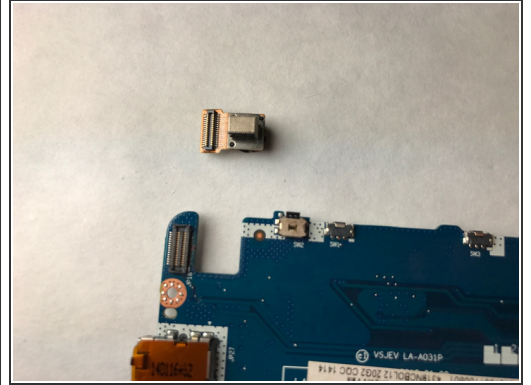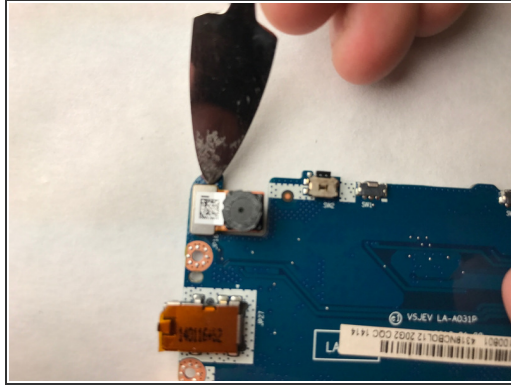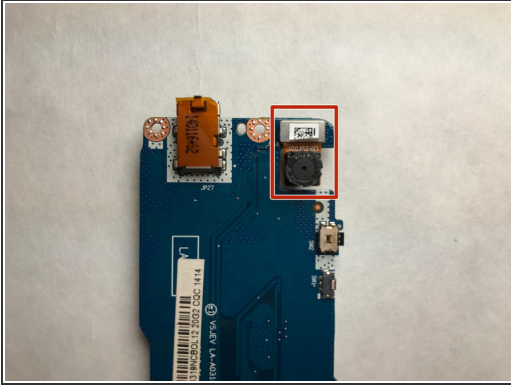   

- Remove the camera with the metal spludger

⚠ Careful to not damage the plug in

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-26 06:58:08 AM.